

- 1) Turn the master switch on
- 2) Enter the manufacturers setting
 - a. Hold down left, right and pump buttons
 - b. After 5 seconds release left and right
 - c. Tap the lights button
 - d. Release the pump button
 - e. A screen should be displayed instructing you to press enter to enter the manufacturer's settings, press enter

Use the left and right arrows to scroll down to the settings

Manufacturers Settings

Voltmeter	On
Ammeter	Off
Battery Select	Off
Int Temp	On
Ext Temp	Off
Pump System	Off
Fill Tank	Off
Swap Awning	No
Water Probe	Off
Waste Probe	Off
Dimmer Lights	On
Chg V Batt	Off
Pump Running	12v
Analog Water	On
Zero Water	0.75v
Water Depth	170
230v Symbol	Volt
Zero Waste	0.75
Waste Depth	170
Auto Pump	Off
Swap Temps	No
Alarms	No
Vbat Swit	Off
Auto Tank Enab	Off
AmmeterIn	VLR6p5
Vbat Volt	No